

Wallpaper installation


Follow our instructions which will help you step by step in applying your wallpaper

Equipment needed

Pencil – Cutter – Brush – Spatula Upholsterer – Roller for glue – Bucket – Plumb line – Glue (Metylan Special 200 gr)


To help you with the application of the paper on the entire wall, we decided to add an abundance of 3-5 cm and a 2-4 cm bottom on the final slope (on the right).

Between a roll and the next roll there are no abundances, so it is IMPORTANT TO MAKE THE FOLLOWING ROLLER PERFECTLY WITH THE PREVIOUS.

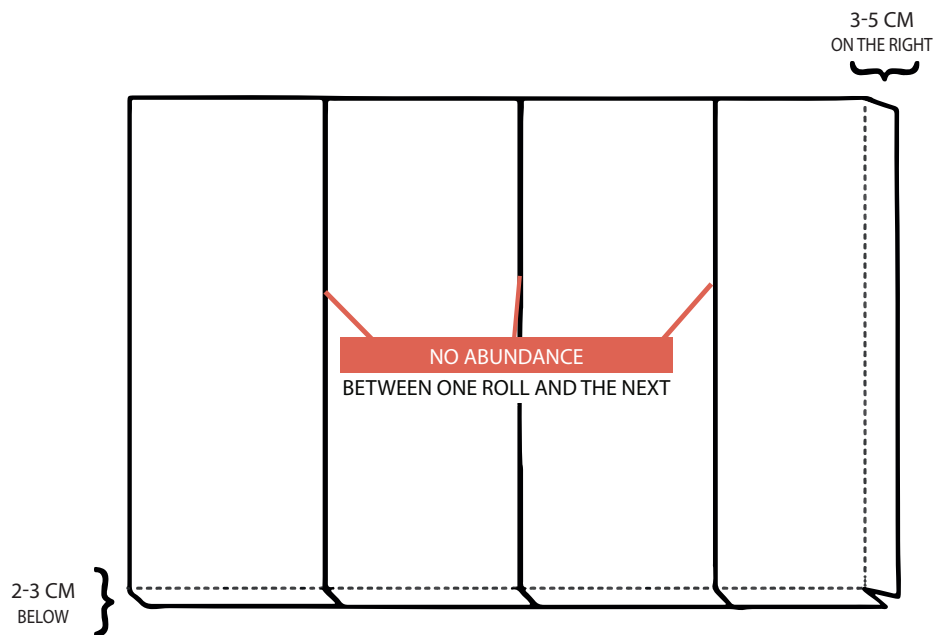

BEFORE STARTING MAKE SURE THAT THE WALLPAPER IS NOT PRESENT DAMAGE DUE TO TRANSPORT.

Unroll and then check that the rolls are intact in shape and colors. Once the card is applied to the wall, it will no longer be possible to receive a refund.

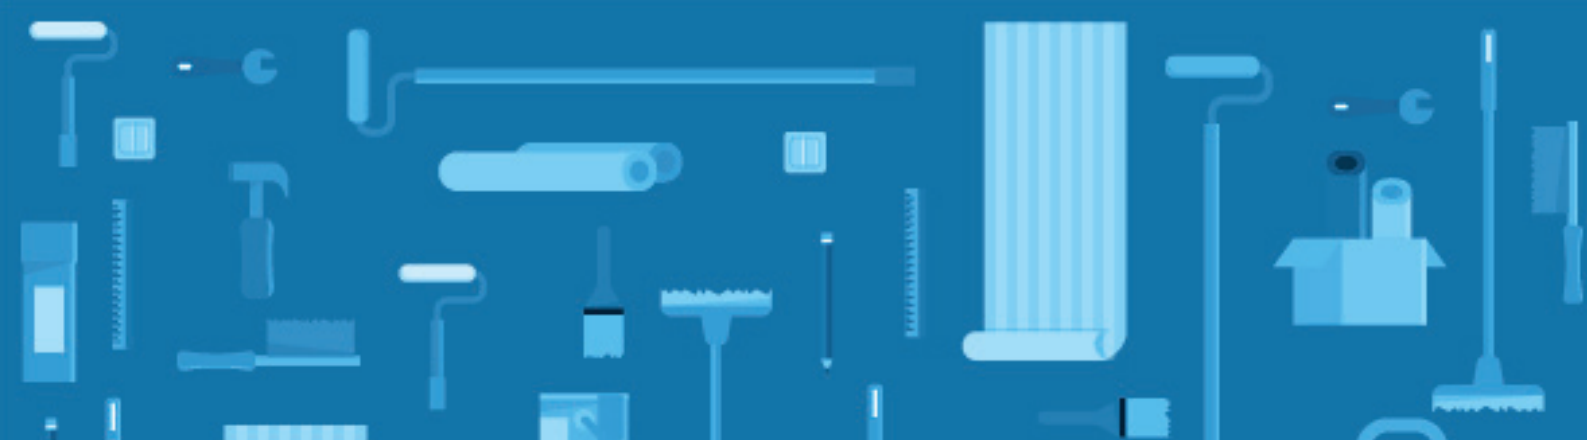

If there are electrical outlets or switches on the wall, remove the plates before applying the roll to the wall. At the electrical socket, cut the cross paper, folding the corners inside. Once the wallpaper application phase has been completed, it will be possible to replace the plate on the electrical socket.

1.

Prepare the wall by stuccoing and sanding any holes or cracks making it as uniform as possible, smooth, clean and dry.

2.

Prepare the glue by carefully following the instructions on the package, to determine the right proportions of dust and water. The adhesive that we recommend is METYLAN SPECIAL 200 GR

3.

The wallpaper will have on the back of each roll a number (from left to right) so as to facilitate the composition of the design.

4.

On each roll of wallpaper placed face down, the glue should be spread with a large brush or roller. Try to cover the surface evenly and let it rest between 5 and 10 minutes before applying the roll to the wall. Each installer will calculate this time also according to the temperature or conditions of the wall.

5.

Now run the application starting with the rollo N.1 resting it carefully at the beginning edge of the wall: place the roll on the wall and spread it from the top down, checking with the plumb line the correct alignment.

6.

Use an upholstery brush, always starting from the top down and from the center to the sides, to smooth the wallpaper.

Proceed with the laying of the glue for the second roll and so on until the end of the wall, making sure to match each roll with the one laid previously.

7.

Use a well-sharpened line and a fine thread to eliminate any excess wallpaper on the right and bottom at the end of the pose. Should the glue come out from the edges during installation, remove it with a sponge with water before it dries!

DO NOT USE SOLVENTS or DETERGENTS

Warnings

1.

Since it is wallpaper it is advisable to handle it with great care, avoiding contact with abrasive objects or tools, or in any case which could compromise the integrity of the paper. Especially on the printed part. We therefore recommend a soft brush when laying.

2.

Make sure that the glue used does not contain solvents. Glue recommended:



Metylan Special 200g

Methylcellulose based powder adhesive ideal for bonding heavy, vinyl wallpaper and difficult to bond.

3.

To remove the glue on the outside, use only water with a soft cloth, rubbing the surface slightly. (NO screens or abrasive materials) Water without adding other products that may contain solvents

DO NOT USE DETERGENTS OR SOLVENTS ON PAPER (ALCOHOL, AGGRESSIVE DETERGENTS) AS THESE CAN CAUSE COLOR FADING OR PART OF IT TO BE WASHED AWAY.

4.

The printed part can always be cleaned with great care using pure water and a soft cloth

The wallpaper was printed on measure, according to your request and on the measures you have chosen. Wallpapers are examined before packing and shipping by passing two checks on the integrity and compliance of the order measurements. However, we recommend that you carefully examine the wallpaper product before installation and if any anomalies were found, request a return. To obtain a refund, the wallpaper must be sent back intact. Complaints are not accepted if the paper has already been pasted on the wall or other supports, except in particular conditions

Babyinteriordesign is NOT responsible for any problems deriving from or attributable to the laying of the wallpaper